

Датчики остаточного тока

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ddo@nt-rt.ru || сайт: <https://dold.nt-rt.ru/>



Residual current monitor, Type B RN 5883

- Width: 52,5 mm
- Adjustable measuring ranges: 0,01 - 3 A
- Operate delay: Yes
- Classification: Type B (AC, DC even and pulsating)



Residual current monitor, Type A IL 5882

- Width: 35 mm
- Adjustable measuring ranges: 0,01 - 10, 0,01 - 30 A
- Operate delay: Yes
- Classification: Type A (AC, DC pulsating)



Residual current monitor, Type A SL 5882

- Width: 35 mm
- Adjustable measuring ranges: 0,01 - 10, 0,01 - 30 A
- Operate delay: Yes
- Classification: Type A (AC, DC pulsating)



Residual current monitor, Type A, with integrated transformer IR 5882

- Width: 105 mm
- Adjustable measuring ranges: 0,01 - 10 A
- Operate delay: Yes
- Classification: Type A (AC, DC pulsating)

Signaling instead of shutting down - Functional principle of residual current monitoring

Unplanned interruptions in the operation of machines and systems are a considerable cost factor. Insulation faults are a frequent reason for this. In grounded systems (TN and TT systems), residual current monitors ensure reliable fault current monitoring. Expensive downtimes are thus avoided, and a possible fire hazard, which is latent due to creeping insulation faults, is also prevented. The residual current monitors can be used universally, as they detect direct (DC) and alternating (AC) currents equally.

The residual current measurement is carried out via an external residual current transformer. All conductors of the feeder to be protected (without PE) are fed through the transformer. In a fault-free system, the sum of all currents is zero, so that no voltage is induced in the residual current transformer (measuring current transformer). If a residual current flows via earth due to an insulation fault, the current difference in the current transformer causes a current which is detected and evaluated by the residual current monitor.

Difference to residual current circuit breaker: Residual current circuit breakers, so-called RCD (Residual Current Protective Device), always cause an immediate shutdown. The consequences are cost-intensive plant shutdowns or loss of data.

Residual current monitors, on the other hand, can display the current fault current and signal when response values are exceeded and/or also switch off. In this way, the plant operator receives early information about critical operating states that are developing and thus avoids possible personal injury, fire damage and material damage. The residual current monitors of the VARIMETER RCM family, with external or also integrated residual current transformers, permanently monitor your plant for fault currents. Degradation of insulation is indicated at an early stage so that preventive maintenance and servicing measures can be initiated.

All conductors of the feeder to be protected (except for protective earth) are routed through the residual current transformer. In a fault-free system, the sum of all currents is zero; no voltage is induced in the transformer. If a fault current flows via earth, the current difference causes a current in the transformer. This is detected and evaluated by the electronics of the residual current monitor.

The measuring method applies to residual current monitors in applications with pure AC currents AC and pulsating DC currents DC (type A according to IEC/TR 60755). Special measuring procedures are used for AC/DC sensitive residual current monitors (type B). They are suitable for measuring all types of residual currents in electrical installations: AC, pulsating and smooth DC residual currents.

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: ddo@nt-rt.ru || сайт: <https://dold.nt-rt.ru/>